

Caution for Safety

Warnings:

Please strictly follow below instructions, to avoid loss or injury.

- Please use the specific AC adapter, to avoid damage or fire.
- Keep away from the curtains or other combustible goods, to avoid fire.
- Please do not cover the desk lamp with cloth, paper or other combustible goods, to avoid fire.
- Do not use in the dank or high humidity environment, to avoid electric shock or fire.
- Please strictly follow the instructions to install or adjust the desk lamp, to avoid falling off, fire or injury.
- Do not disassemble or rebuild the lamp, to avoid electric shock or damage.
- Do not pull the cables when taking off the AC adapter, to avoid failure, electric shock or fire.
- Please take off the AC adapter while keeping the desk lamp off for long time, to avoid failure or fire.





DESK LIGHT BLACK



Happiness at work














Tel. +45 86 85 43 43 salg@xsystems.dk



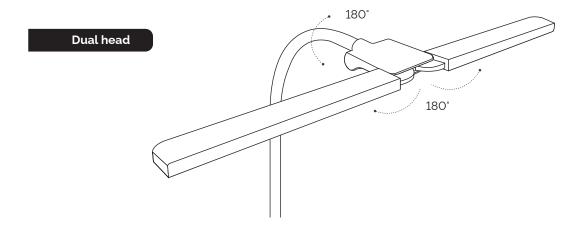

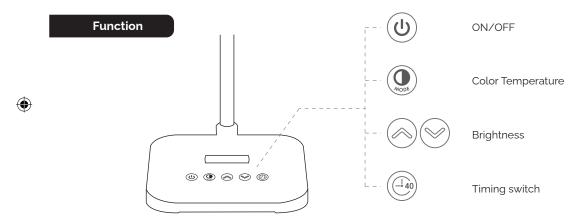

Installation

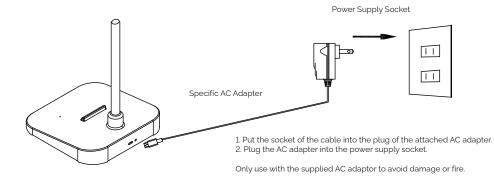

Touch Switch

- ON/OFF: slight touch power on , touch again power off.
- Color Temperature: Four (4) color temperature to choose, it begins with Daylight, Natural White, Cool White & Warm White.
- Brightness: Five (5) level of brightness, the initial state is 60%, then change
- Timing switch: gently touch the timing key, the timing for 40M, the corresponding indicator lights will light up, and the touch will end the timing function.
- Memory function: when normally power off, It can remember the brightness setting from you last use. But if in case of outage, it back to the initial stage



Caution

- Only use the desk lamp on a flat surface to avoid it falling over.
- Do not look at the LEDs (the light source) directly, to avoid damage to eyes.
- Keep away from the TV set or radio while using the desk lamp, which m ay cause noises.



Maintenance

- Do not immerse appliance, cords or plugs in water or other liquid to avoid electric shock and personal injury.
- Do not clean the lamp with petrol or other chemical cleansers, to avoid damaging the surface.
- While cleaning the lamp, please take off the AC adapter, to avoid electric shock.
- Do not put metal objects into the holes or gaps in the lamp which are for ventilation, to avoid damage or electric shock.



✓!\ Usage

- The desk lamp is for indoor use only, do not use outdoors.
- Remove the AC adaptor immediately should the desk lamp become damaged, to avoid elec-
- Do not put anything on the cables, or swing the cables, to avoid electric shock or fire due to the cable failure.
- Do not place on or near an open flame or electric burner or in an oven.
- Keep away from pets to avoid damage to the lamp.

