

■ Black

148 mm




WELL-BEING

USER MANUAL

ITEM300154

 MASSAGE CHAIR DELUXE COMFORT

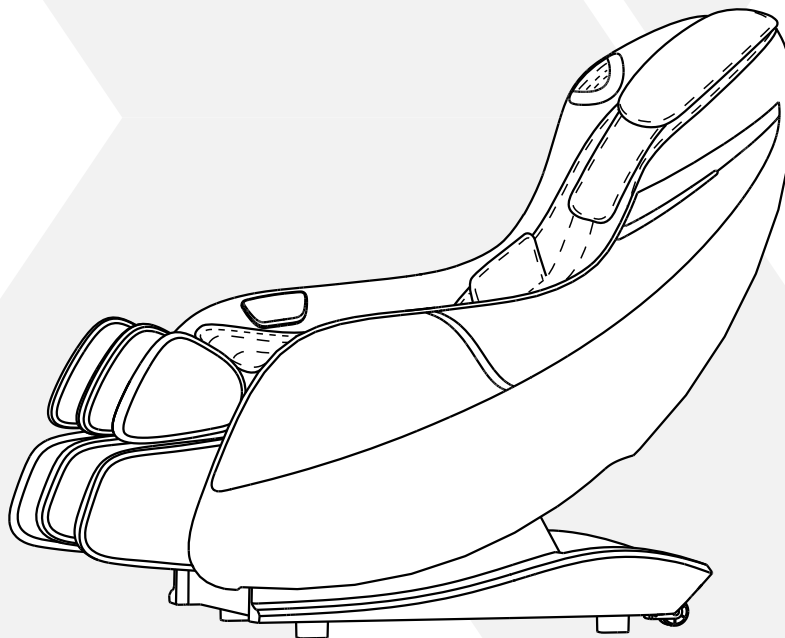

210 mm



Please read **SAFETY INSTRUCTIONS** carefully before using the chair.

Happiness at work



ERGONOMICS



SOUND



LIGHT



AIR

X SYSTEMS
Happiness at work



CONTENT

Please read and follow all safety and operating instructions listed in this user manual before use. Basic precautions should always be used when operating.

Safety Instructions 2-3

Product Specifications 4

Product Components 5-6

Chair Installation 7-8

Remote Controller 9

Operation Guide 10-12

Trouble Shooting 13

Maintenance 14

Note: The Company reserves the right to revise the design and description of this product without any further notice.



SAFETY INSTRUCTIONS

Warning

The power plug must insert properly to the power outlet. If the connection of power plug is not connected properly it can result the risk of electric shock. Do not modify the power plug provided with the product, if the outlet is not suitable.

Please make sure that the power outlet is properly installed by a qualified electrician.

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock.

1. Please make sure that the power plug is inserted into the proper outlet to reduce the risk of short-circuit and fire.
2. Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
3. Do not use the massage chair in places where the humidity is high.
4. Do not use the massage chair for outdoors and avoid place with direct sunlight.
5. If the power goes OFF during use make sure to switch the power OFF position and removed the power plug from power socket to prevent damage when the power is restored.
6. Do not operate the massage chair if the power cord is wet or damaged.
7. Do not plug or unplug the power cord from the power socket with wet hands.
8. Supervision is necessary when the massage chair is being used by or near the children or disabled person.
9. Use the massage chair only for its intended use as described in this user manual.
10. Do not stand, sit or jump in the calves rest, backrest and armrest when the massage chair is in use to prevent any injury.
11. Do not fall asleep during the massage session.
12. Always keep the massage chair clean and do not insert any object into the gaps and around the massage chair.
13. Do not move the massage chair by pulling the power supply cord.
14. Make sure that when lowering the lower leg, there are no other objects, especially children.
15. Always check whether the surface of the massage chair is torn or ripped before usage, if you found any unfamiliar rips in any area of the cloth in the backrest, do not use the massage chair. Kindly contact the authorize service center for repair.
16. This appliance is designed for household use only.
17. For those people who suffering from illness, please consult doctor before use.





SAFETY INSTRUCTIONS

18. The following conditions should consult doctors before use:
 - Suffering from malignant tumor.
 - People with heart disease.
 - Women in pregnancy, menstruation and perpetual fever.
 - People who are medicated or under medication.
 - People with osteoporosis.
 - People with back bended exceptionally by the accident or disease.
19. If you experience pain during usage, stop using the massage chair immediately. If any injuries occur, seek medical treatment immediately.
20. Do not massage the swollen or inflamed parts of the body.
21. This product is non-professional appliance designed to provide a comfortable massage. Do not use this product as substitute for medical treatment.
22. Each massage session should not exceed 30 minutes. Massage the targeted area for only 15 minutes, over massaging can lead to overheating, thus giving the appliance shorter lifespan.
23. Do not operate where aerosol (spray) products are used or where oxygen is being administered.
24. The massage chair is not suitable for children aged 12 and below.

NOTE:

- This appliance is not intended for use by persons (including children) to reduce the physical sensory or mental capabilities or lack of knowledge how to use the massage chair, unless they have been given supervision or instruction concerning to use this appliance by the responsible person for their safety.
- If the power supply cord is damaged it must be replaced by a special or assembled available from the manufacture or its service agent.
- The massage chair heats up during operation, persons sensitive to heat must take extra caution when using the massage chair.
- The maximum load of this product is 250 lbs exceeding of its will affect the performance of the product.



■ Black

148 mm



PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Massage Chair Deluxe Comfort
Model No.	ITEM300154
Rated Voltage	220V
Rated Frequency	50 Hz
Rated Power Consumption	100W
Carton Dimension	1570mm(L)x740mm(W)x860mm(H)
Weight	NetWeight: 53kg Gross Weight: 68kg



210 mm



 
■ Black

148 mm




PRODUCT COMPONENTS

Main Body Diagram (Front)

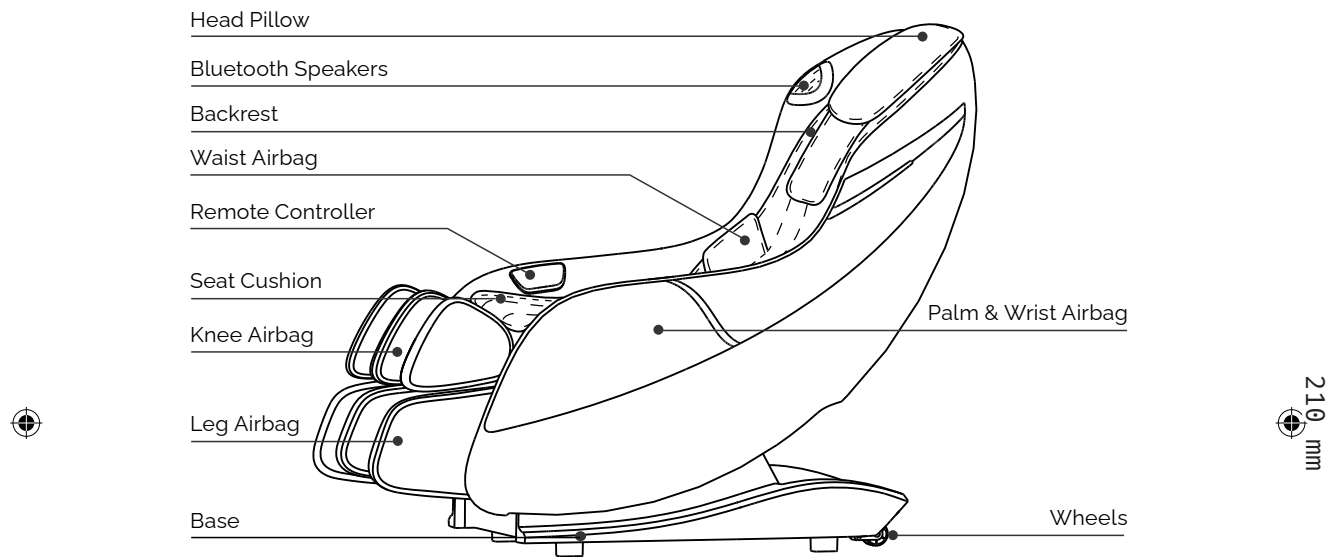

 The kneerest can rotate according to your needs.

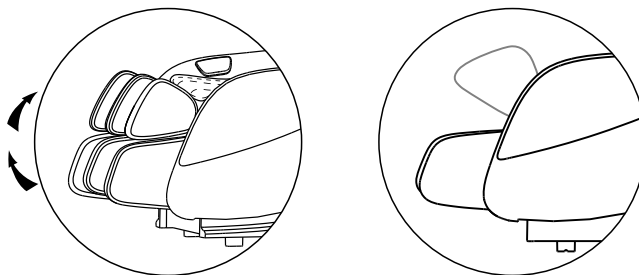


■ Black

148 mm



PRODUCT COMPONENTS

 Main Body Diagram (Rear)

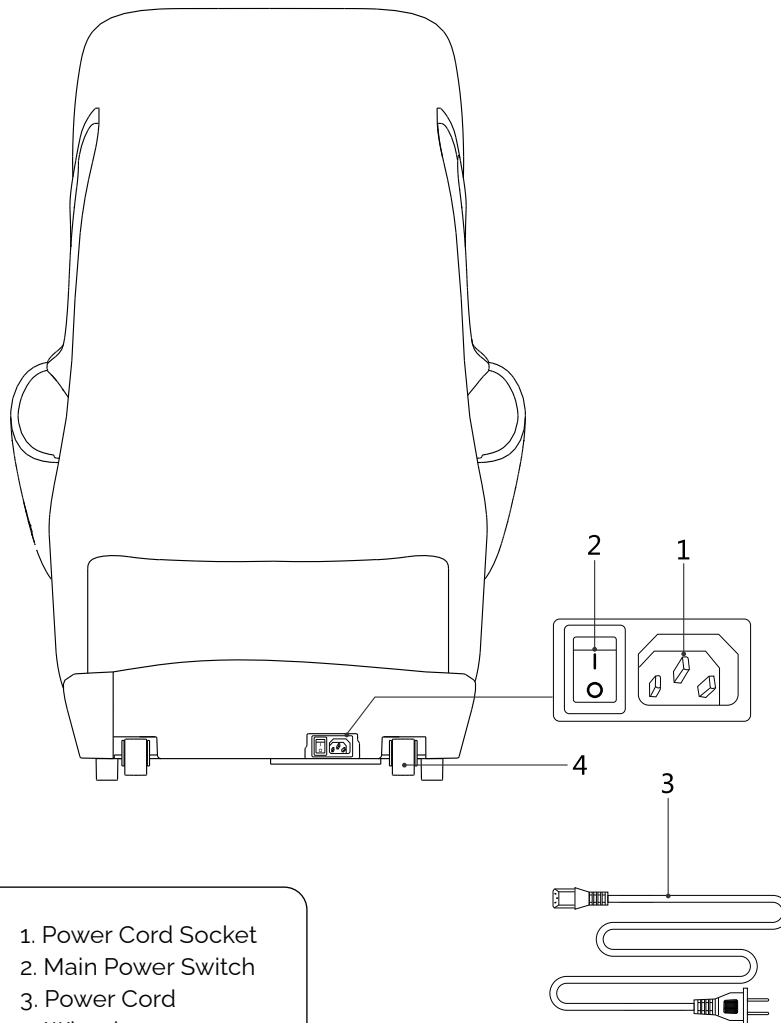


210 mm






CHAIR INSTALLATION

 1. Remove the package and get out the spare parts

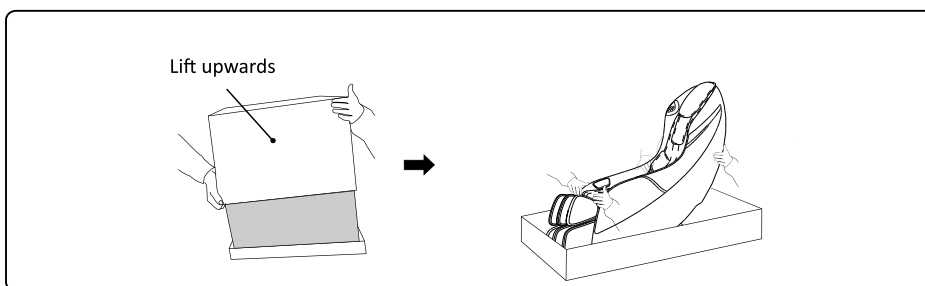

- 1) Remove the carton.
- 2) Take out the foam.

 2. Place the massage chair in an open area

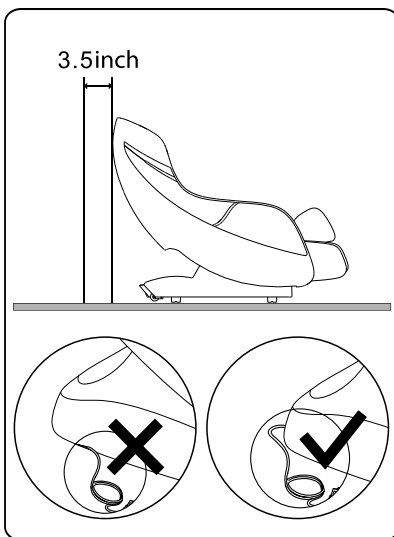

- Lift the entire massage chair out of the bottom box and place it in a suitable place in your home.
- Allow sufficient space around the chair for recline purposes.

5-10cm distance for the back side and 40cm in front of the footrest.

- * In order to avoid the damage of the floor and to reduce the noise, please put area rug under the massage chair.
- * Make sure that there are no barriers in front and the back of the massage chair.
- * Please do not put it in wet or uneven floor.
- * To avoid signal interference, please place it 4 feet away from AV,TV, and radio.

Warning:

Do not put the power cord under of relax chair!

 
3. Double check the installation steps, smooth out any creases in the cushions.





CHAIR INSTALLATION

4. Moving the massage chair.

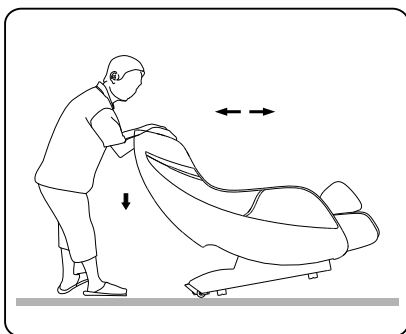

As illustrated, push the backrest downwards and tilt chair on to its wheels at a 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

 
CAUTION:

- * Do not move massage chair when occupied or in use.
- * Moving the massage chair may cause damage to the floors. Floor protection is recommended (e.g. rugs or carpet).
- * Do not drop or suddenly let go of the chair when moving as it may damage the chair.
- * Two persons are recommended when moving and extra care when handling the massage chair.



REMOTE CONTROLLER

Remote Controller

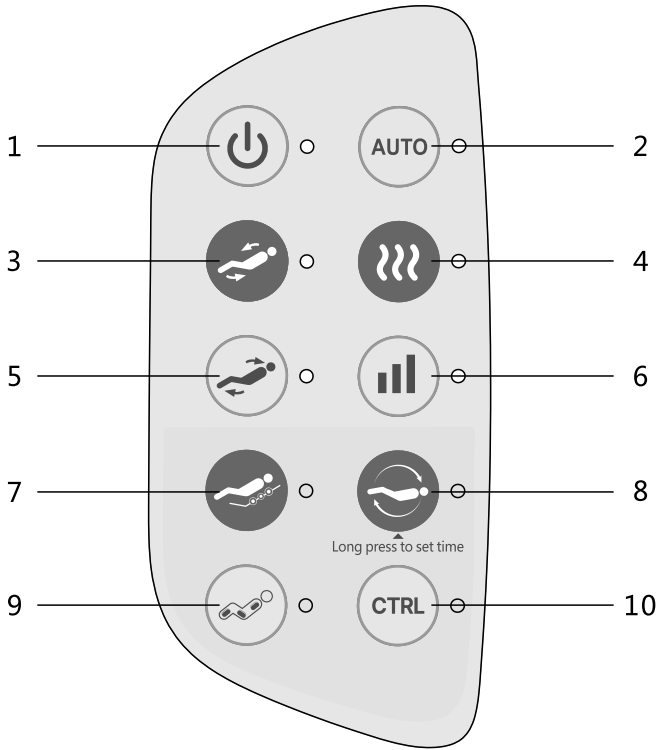

- | | | |
|----------------------------------|---|--------------------------|
| 1. ON/OFF Button | 5. Backrest down and footrest up | 8. Recline Up/Down |
| 2. Auto massage | 6. Strength Adjust | 9. Airbag manual massage |
| 3. Backrest up and footrest down | 7. Massage section
1. whole 2. section
3. point | 10. Manual Mode |
| 4. Heat | | |

OPERATION GUIDE

Function Description of Controller Buttons

 Press once to turn the massage chair on.

 Press the button to start Automatic massage.
(5 automatic programs)

No.	Program Order	Program Name	Key Massage Points & Sequence	Default Intensity
1	Auto 1	Powerful Massage	Kneading-Tapping-shiatsu-Knocking	Medium
2	Auto 2	Air Pressure Massage	Back mechanism stops working at the neck, then leg - arm - waist - whole body air pressure massage.	Medium
3	Auto 3	TV Watching Mode	Chair in reset state. Kneading - Knocking - Shiatsu - Tapping	Medium
4	Auto 4	Relaxing Massage	Shiatsu- Tapping-Knocking-Kneading	Medium
5	Auto 5	Long Sitting office	Shoulder and neck kneading - Tapping - Knocking - Buttocks kneading	Medium
6	Heating Areas	Legs, waist heating	Wonderful fast and comfortable heating features	Fast

 Press the button to raise back and lower legs.

 Switch on/off for heating function.

 Press the button to lower back and raise legs

 Strength adjust.
(Green: Low, Blue: Mid, Red: High)



OPERATION GUIDE

Function Description of Controller Buttons



Manual massage defaults to the entire back. During operation, you can specify three ranges of the back: overall, local, and fixed-point



Press the button to rise/recline the backrest
(3 levels of zero gravity);
Long press to set time(S. 15. 30min)



Airbag manual massage can switch between leg airbags,
hand airbags and waist airbags



Press the button to Manual mode. (knead/knock/tap/shiatsu/sync)



The method of playing the bluetooth music in massage chair

- A. Match: Open the bluetooth function in mobile phone or I pad, and search nearby.
Choose the massage chair bluetooth music equipment and match with it.
- B. Play music:After matching with it,you can display the music by mobile or App
music display software.

Attention:

Please off the bluetooth connection when not in use so as for other devices to
connect smoothly.


Bluetooth ID: ITEM300154
PASSWORD: 6666





OPERATION GUIDE

 
After use

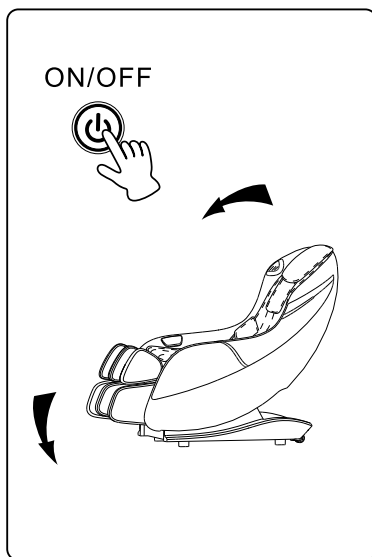

- 1) Press the power button to power off the massage chair.

* Make sure whether there are no barriers around the massage chair.

 - 2) Get up when massage chair rest to initial state.

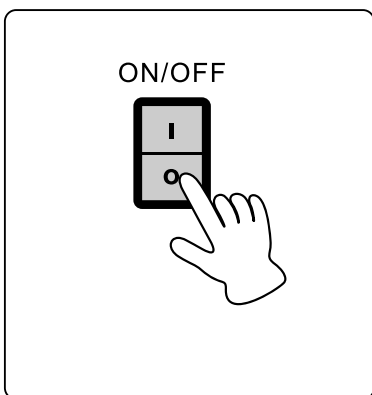

- 3) Turn off the main power switch.

- 4) Remove plug from power outlet.

* Please do not pull on the power cord to remove the plug.

* Please do not unplug with wet hands.





TROUBLE SHOOTING


If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

Problem	Solution
Makes a sound when operating.	The sound of the structural design will not affect the chair.
The massage chair is connected to power but is not functioning.	1. Check to see if the power plug is inserted properly or if the power outlet is functioning properly. 2. Check to see if the main power switch is in the "I" position.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30-50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" or into "idle" mode when a massage program is completed. Please press the power button again to turn on the chair.






 MAINTENANCE

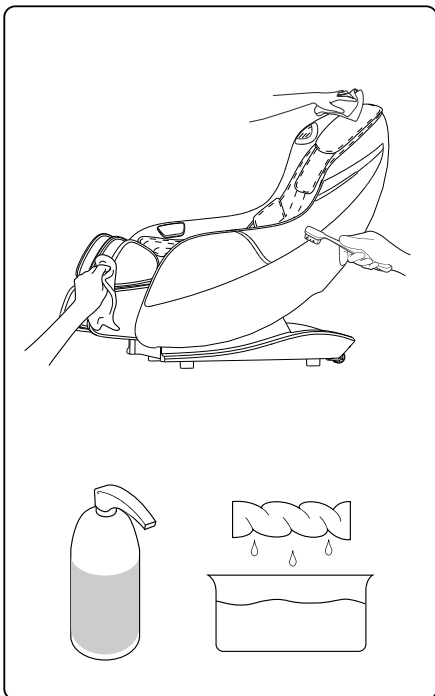

 - Turn OFF and pull out the power plug before clean the massage chair, do not touch the power plug with wet hands.
- Please use neutral wash to wipe and lightly brush the chair.
- Use dry cloth to wipe and sweat and other besmirch.

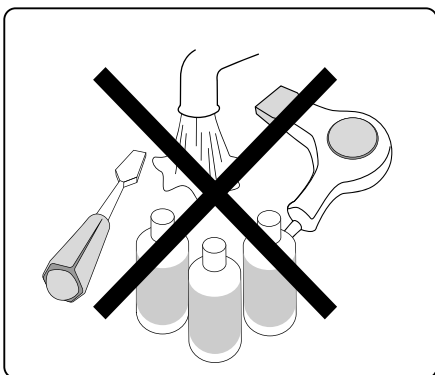

- Do not use water to clean the chair.
- Do not use a hairdryer to dry the massage chair.
- Do not use gasoline, thinner, alkaline lotions, bleach, etc



■ Black

148 mm



210 mm

Tel. +45 86 85 43 43
salg@xsystems.dk
xsystems.dk



■ Black

148 mm

 


WELL-BEING

BRUGERVEJLEDNING

MODEL: 300154

MASSAGE CHAIR DELUXE COMFORT

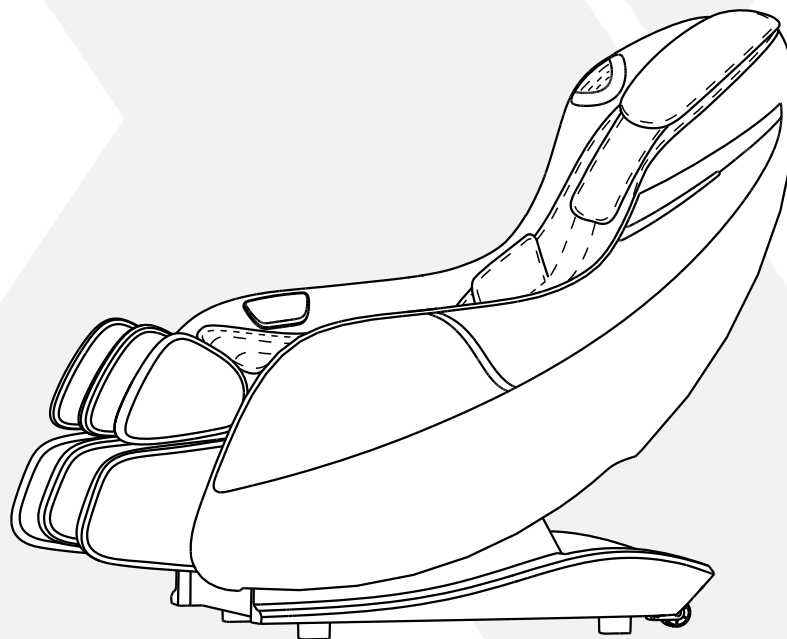

210 mm



Læs venligst SIKKERHEDSINSTRUKTIONERNE grundigt, før du bruger stolen.

Happiness at work



ERGONOMICS



SOUND



LIGHT



AIR

X SYSTEMS
Happiness at work



INDHOLD

Læs og følg alle sikkerheds- og brugsanvisninger i denne brugermanual inden brug. Grundlæggende forholdsregler bør altid overholdes under brug.

Sikkerhedsinstruktioner 2-3

Produktspecifikationer 4

Produktkomponenter 5-6

Stolsinstallation 7-8

Fjernbetjeningsbetjening 9

Driftsvejledning 10-12

Fejlfinding 13

Vedligeholdelse 14

Bemærk: Virksomheden forbeholder sig retten til at ændre design og beskrivelse af dette produkt uden yderligere varsel.



SIKKERHEDSINSTRUKTIONER

Advarsel:

Strømsstikket skal være korrekt isat i stikkontakten. Forkert forbindelse kan forårsage elektrisk stød. Modificér ikke stikket, hvis stikkontakten ikke passer. Sørg for at en kvalificeret elektriker har installeret stikkontakten korrekt. Grundlæggende sikkerhedsforanstaltninger skal altid følges for at reducere risikoen for elektrisk stød:

1. Sørg for at strømsstikket er korrekt isat for at undgå kortslutning og brand.
2. Tag altid stikket ud lige efter brug og før rengøring.
3. Brug ikke stolen i fugtige omgivelser.
4. Brug ikke udendørs eller i direkte sollys.
5. Ved strømafbrydelse under brug, sluk stolen, og tag stikket ud for at forhindre skader.
6. Brug ikke stolen hvis kablet er vådt eller beskadiget.
7. Isæt eller fjern ikke stikket med våde hænder.
8. Børn og handicappede bør overvåges ved brug.
9. Brug kun stolen som beskrevet i manualen.
10. Stil dig ikke, sid ikke eller hop på fodstøtte, ryglæn eller armlæn under brug.
11. Sov ikke under massagesession.
12. Hold stolen ren og indsæt ikke genstande i sprækker.
13. Træk ikke i kablet for at flytte stolen.
14. Sørg for ingen objekter, især børn, når benstøtte sænkes.
15. Tjek altid for rifter i stoffet, og brug ikke stolen, hvis der findes skader. Kontakt servicecenter.
16. Kun til husholdningsbrug.
17. Personer med sygdom bør konsultere læge før brug.





SIKKERHEDSINSTRUKTIONER (FORTSAT)

18. Følgende personer bør søge lægeråd før brug:

- Personer med ondartede tumorer.
- Personer med hjertesygdom.
- Gravide, menstruerende, ved feber.
- Medicinske patienter.
- Personer med rygskeer.
- Personer med osteoporose.

19. Stop straks, hvis smerte opstår, og søg lægehjælp ved skade.

20. Massér ikke hævede eller betændte områder.

21. Produktet er til komfortmassage, ikke medicinsk behandling.

22. Hver massagesession bør ikke overstige 30 minutter, og max 15 minutter pr. område. Overmassage kan skade apparatet.

23. Brug ikke i nærheden af spray eller iltbehandling.

24. Ikke egnet til børn under 12 år.

Bemærk:

- Ikke egnet for personer med nedsat fysisk eller mental kapacitet uden opsyn.
- Hvis strømkablet er beskadiget, skal det udskiftes af producenten eller autoriseret servicetekniker.
- Stolen bliver varm ved brug; følsomme personer bør udvise forsigtighed.
- Maksimal belastning: 113 kg, overskridelse kan skade produktet.

■ Black

148 mm



PRODUKTSPECIFIKATIONER

Specifikation	Værdi
Produktnavn	Massage Stol Deluxe Comfort
Modelnummer	ITEM300154
Spænding	220V
Frekvens	50Hz
Effekt	100W
Kartonmål (L x B x H)	1570 x 740 x 860 mm
Nettovægt	53 kg
Bruttovægt	68 kg



210 mm

 


■ Black

148 mm




PRODUKTKOMPONENTER

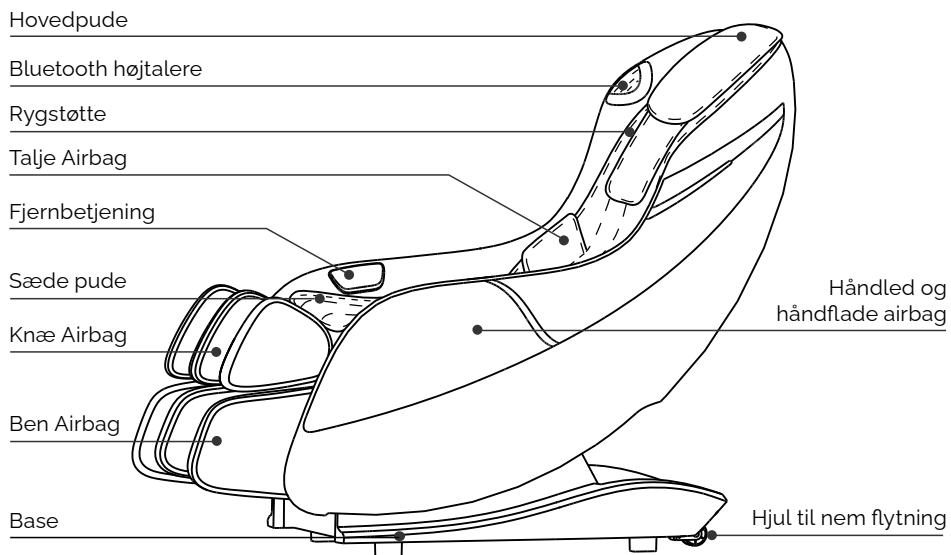

210 mm

 Justerbart knæstøtte

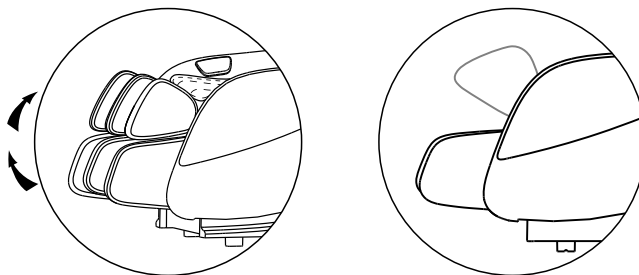


■ Black

148 mm



 PRODUKTKOMPONENTER

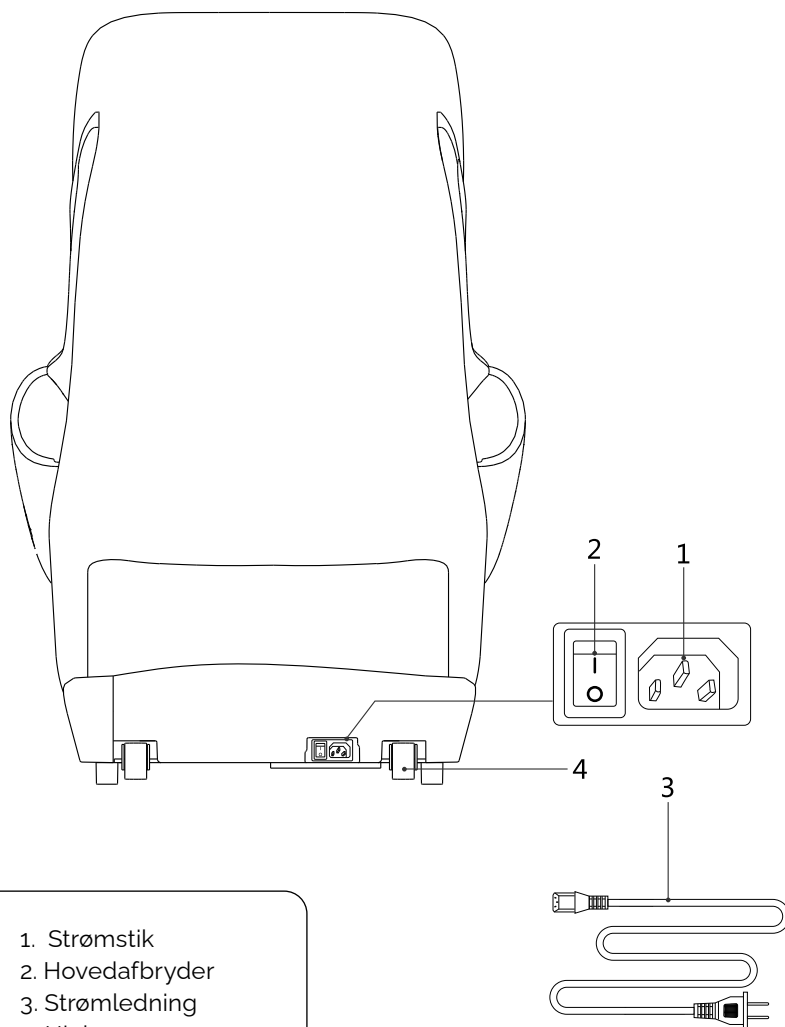


210 mm






STOL INSTALLATION

 1. Fjern emballage og tag reservedele ud.

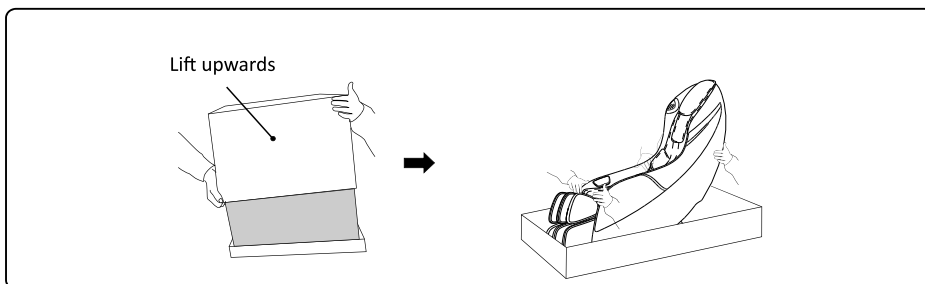

- 1) Fjern kartonen.
- 2) Tag skummet ud.

 2. Placer stolen i et åbent område, fri plads omkring (5-10 cm bagpå, 40 cm foran fodstøtte).

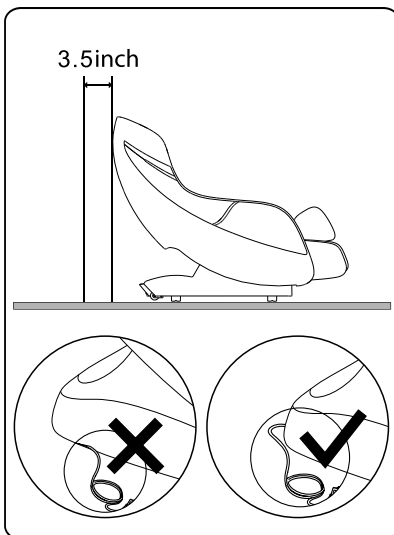

- Læg gerne et tæppe under stolen for at beskytte gulvet og reducere støj.
- Sørg for rene, tørre og jævne gulve.
- Hold afstand på mindst 1,2 m til AV-udstyr, TV og radio for at undgå signalforstyrrelser.

210 mm

 
3. Dobbelttjek installationsstegen, glat eventuelle folder i puderne ud.





STOL INSTALLATION

4. Flytning af massagestolen.

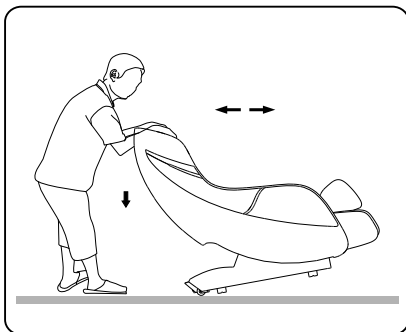

Vip rygstøtten tilbage, træk stolen på hjul i ca. 45° vinkel. Skub langsomt til ønsket placering og sænk stolen forsigtigt helt ned på gulvet.

Advarsler:

- * Flyt ikke stolen, mens den er i brug eller besat.
- * Flytning kan beskadige gulvet; brug gulvbeskyttelse.
- * Lad ikke stolen falde pludseligt ved flytning – to personer anbefales.
- * Kabel må ikke ligge under stolen eller i klemme.
- * Kontroller installationen, glat puderne ud.

 
■ Black

148 mm



FJERNBETJENING

Fjernbetjening

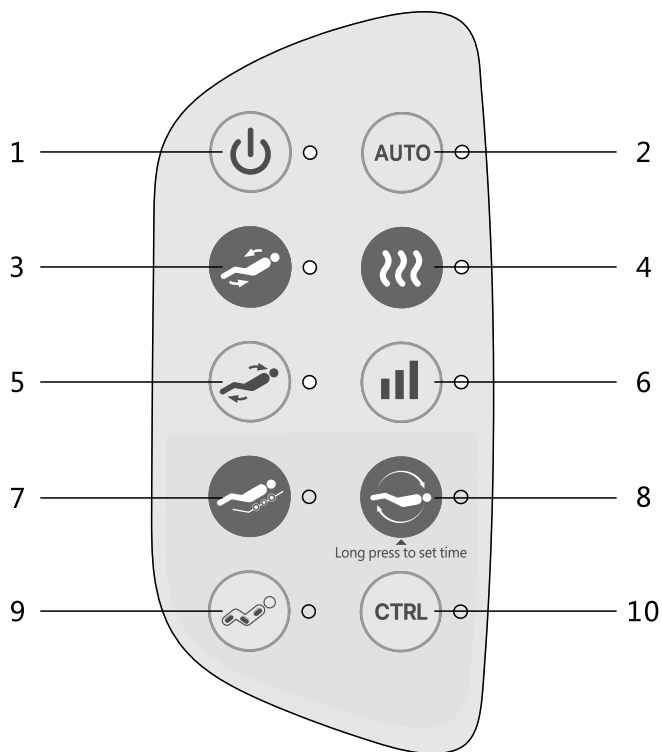

- | | | |
|------------------------------|-------------------------------------|---|
| 1. Tænd/sluk | 5. Ryglæn ned / fodstøtte op | 8. Ryglæn hæv/sænk |
| 2. Auto massage | 6. Styrkejustering | 9. Manuel lufttryksmassage |
| 3. Ryglæn op / fodstøtte ned | 7. Massagesektion (hel, del, punkt) | 10. Manuel massage (Æltning/Knock/Tap/Shiatsu/Synk) |
| 4. Varme | | |





DRIFTSVEJLEDNING

Funktioner og knapper



Pres én gang for at tænde for massagestolen



Massagefunktioner for skulder, nakke, balder
5 Automatiske programmer til massage

Nr.	Program-rækkefølge	Programnavn	Vigtige massagesteder og rækkefølge	Standard intensitet
1	Auto 1	Powerful Massage	Æltning, tapping, shiatsu, bankning	Mellem
2	Auto 2	Lufttryksmassage	Rygmekanismen stopper ved nakken, derefter ben - arm - talje - helkrops lufttryksmassage	Mellem
3	Auto 3	TV-mode	Stolen i nulstillingsstatus. Æltning - Banken - Shiatsu - Tapning	Mellem
4	Auto 4	Afslappende massage	Shiatsu - Tapning - Banken - Æltning	Mellem
5	Auto 5	Kontor-mode	Skulder- og nakkemassage - Tapning - Banken - Sædemassage	Mellem
6	Varmeom-råder	Ben, talje opvarmning	Fantastiske hurtige og komfortable varmefunktioner	Hurtig



Hæv/sænk ryg og ben



Varmefunktion on/off



Hæv/sænk ryg og ben



Styrkejustering (grøn-low, blå-mid, rød-high)





DRIFTSVEJLEDNING

Fjernbetjeningsfunktioner:



Manuel massage: Standard for hele ryggen, kan indstilles til tre zoner: hel, lokalt og punktmassage.



Knappen til at hæve/sænke ryglæn (3 niveauer af zero gravity).
Langt tryk: Sæt massage tid (5, 15, 30 min).



Airbag manuel massage kan skifte mellem airbag ved benene, hånd og håndled.



Tryk på knappen for manuel tilstand.
(æltning/knokken/tapning/shiatsu/synkronisering)



Bluetooth Musikafspilning:

Aktivér bluetooth på mobil/iPad, søg og vælg stolens bluetooth-enhed.

Afspil musik via mobil eller app.

Sluk bluetooth når ikke i brug for at undgå interferens.


Bluetooth ID: ITEM300154
PASSWORD: 6666





DRIFTSVEJLEDNING

 
Tænd/sluk procedure

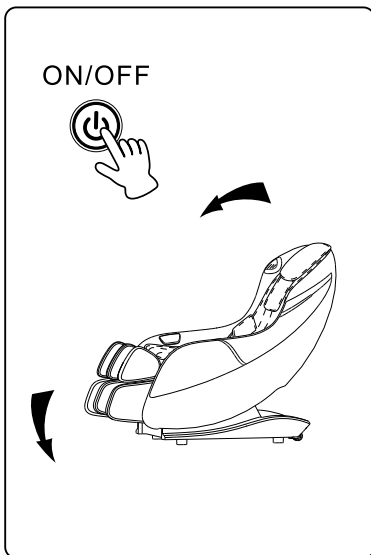

1) Sluk med tænd/sluk knappen.

* Sørg for, at der ikke er nogen forhindringer omkring massagestolen.

 2) Rejs dig op når stolen har returneret til udgangsposition.

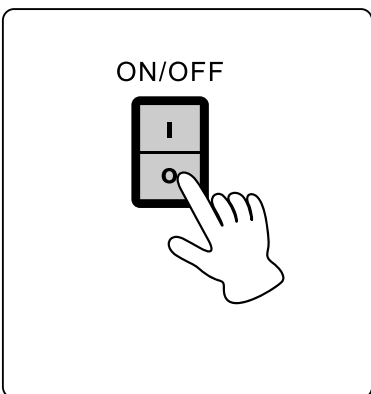

3) Sluk for hovedafbryder.

4) Træk stikket ud af stikkontakten.

* Træk aldrig i kablet for at tage stikket ud.

* Rør ikke strømstikket med våde hænder.





FEJLFINDING


Hvis lyde eller bevægelser ikke er normale, skal du slukke stolen og trække stikket ud af stikkontakten. Kontakt kundeservice for yderligere hjælp.

Problem	Løsning
Lyde under drift	Normal lyd fra stolens struktur, påvirker ikke funktionen.
Stolen er tilsluttet strøm men virker ikke	1. Tjek stikket og stikkontakt. 2. Tjek hovedafbryder er tændt.
Fjernbetjening reagerer, men stolen virker ikke	Stolen kan være overophedet. Sluk og lad den køle 30-50 min.
Hverken fjernbetjening eller stol reagerer	Stolen kan være i "standby" efter afsluttet program. Tryk tænd/sluk knappen for at tænde igen.





 
VEDLIGEHOLDELSE

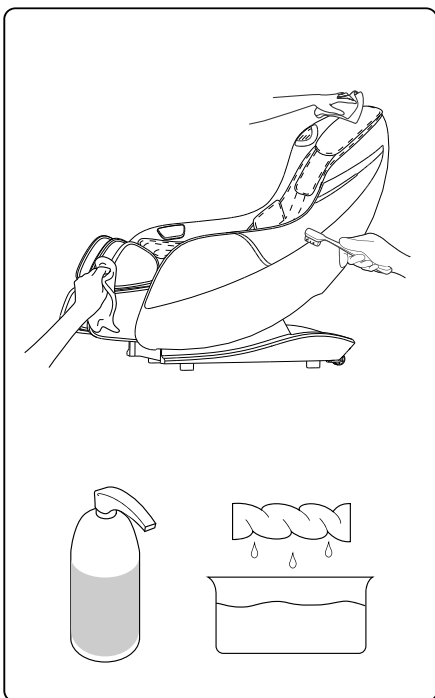

- Sluk for stole og træk stikket ud før rengøring. Rør ikke ved strømstikket med våde hænder.

- Brug et neutralt rengøringsmiddel til at tørre og børste stolen let.

 - Brug en tør klud til at fjerne sved og anden snavs.

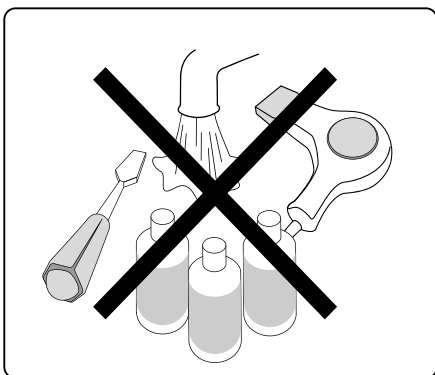

- Brug ikke vand til at rense stolen.

- Brug ikke hårtørrer til at tørre massage stolen.

- Brug ikke benzin, fortynder, alkaliske lotioner, blegemidler eller lignende.



■ Black

148 mm



210 mm



Tlf. +45 86 85 43 43
salg@xsystems.dk
xsystems.dk

